

农业混流泵供应商 农业混流泵 泰安金石泵业

产品名称	农业混流泵供应商 农业混流泵 泰安金石泵业
公司名称	泰安金石泵业有限公司
价格	面议
规格参数	
公司地址	山东省泰安市泰山区南关路12号
联系电话	13605386905

产品详情

混流泵

7、填料发热

The padding is

hot

1、填料压得太紧或四周紧密度不够2、填料压得偏斜与轴磨损严重

1.The padding is

pressed too tight or the around compactness is not enough

2.The padding is

pressed deflected and the axile wears seriously

1、旋松压盖螺栓高速填料紧密度

2、松开压盖重新均匀地上紧

1.Loosen the gland bolts to adjust

2.Loosen the gland bolts and tighten it again.

3、水泵出水量不足

The waer yield

of water is not enough

1、进水管路或叶轮有水草杂物

2、转速过低

3、输水高度过高

4、泵盖及叶轮磨损间隙过大

5、填料进气

6、马力不足

7、进水管口插入水中深度不够

1. There are waterweeds and sundries in

inlet pipes or impeller

2.The rotate speed is too low

3.Water delivery height is too high

4.The attrition gap between pump cover

and impeller is too large

5.The padding is air in

6.The horsepower is not engough

7.The depth of inlet pipe under water is

not enough

1、清除水草杂物

2、调整转数

3、降低输水高度

4、用纸垫调整间隙至正常

5、压紧或更换填料

6、加大马力

7、增加插入水中深度至一米左右

1.Clear the waterweeds and sundries

2.Ajust the rotate speed

3.Reduce the water delivery height

4.Add paper washers to adjust the gaps

5.Compact or change padding

6.Increase the horsepower

7.Make the depth of inlet pipe under

water to one meter

3、安装基础：要求土质坚实牢固。

4、水泵安装时，农业混流泵供应商，必须保证泵轴的水平位置。

5、进水管末端应浸入水平面以下一米左右，农业混流泵维修，但须离开泥底半米左右。

6、水泵安装好后，农业混流泵厂家，计算允许吸上高度和扬程，农业混流泵，在水位稳定的条件下，要求为规定数量值的0.8~1.2倍范围，否则水泵不会正常运行

I.

Installation Principle

1. Installation

Height: Cidering the height according to the rainy season or dry season. The suction

vacuum

height can

not be higher than the adsorbing height.

2. Installation

Location: The location is better to close to the water source as p as

can. It should be not

only

keeping the safety but also shortening the water inlet pipe and reduce the

headloss

农业混流泵供应商-农业混流泵-泰安金石泵业(查看)由泰安金石泵业有限公司提供。泰安金石泵业有限公司拥有很好的服务与产品，不断地受到新老用户及业内人士的肯定和信任。我们公司是商盟认证会员，点击页面的商盟客服图标，可以直接与我们客服人员对话，愿我们今后的合作愉快！