

SEAF-20-05.0-L-06-2-A-K-TR 板对板连接器

| | |
|------|-----------------------------------|
| 产品名称 | SEAF-20-05.0-L-06-2-A-K-TR 板对板连接器 |
| 公司名称 | 连兴旺电子(深圳)有限公司 |
| 价格 | .00/件 |
| 规格参数 | 接触点:镀金 |
| 公司地址 | 深圳市光明新区公明街道蒋石社区合和工业区A栋三楼 |
| 联系电话 | 0755-29591214 19902480050 |

产品详情

SEAF-40-01-L-06-2-RA-GP-TR SEAF-30-06.0-S-06-2-A-K-TR SEAF-50-05.0-S-08-2-A-K-TR
SEAF-40-06.0-S-08-2-

A-K-TR SEAF-50-05.0-L-10-2-A-K-TR SEAF-30-05.0-L-06-2-A-K-TR SEAF-40-05.0-S-08-2-A-K-TR
SEAF-20-05.0-S08-2-A-K-TR SEAF-50-01-L-06-2-RA-GP-TR SEAF-10-06.0-L-04-2-A-K-TR
SEAF-50-05.0-S-10-2-A-K-TR SEAF-20-

05.0-S-10-1-A-K-TR SEAF-30-06.0-S-04-2-A-K-TR SEAF-20-05.0-S-06-1-A-K-TR SEAF-30-06.5-S-10-2-A-K-TR

SEAF-40-05.0-L-10-1-A-K-TR SEAF-20-06.5-S-10-2-A-K-TR SEAF-40-01-L-10-2-RA-GP-K-TR
SEAF-20-05.0-L-10-2-

A-K-TR SEAF-30-06.5-S-06-2-A-K-TR SEAF-50-06.0-S-10-2-A-K-TR SEAF-20-06.0-S-08-2-A-K-TR
SEAF-20-01-L04-2-RA-TR SEAF-30-06.5-L-10-1-A-K-TR SEAF-50-01-L-08-2-RA-K-TR SEAF-10-06.5-S-04-2-A-
K-TR SEAF-50-

05.0-S-04-2-A-K-TR SEAF-50-05.0-L-06-2-A-K-TR SEAF-40-06.0-S-06-2-A-K-TR SEAF-50-01-L-06-2-RA-GP-
K-TR

SEAF-50-01-S-10-2-RA-K-TR SEAF-15-05.0-S-10-2-A-K-TR SEAF-40-06.5-L-10-1-A-K-TR
SEAF-40-06.0-L-08-2-A-K-TR SEAF-30-05.0-S-08-2-A-K-TR SEAF-40-06.0-S-04-2-A-K-TR
SEAF-20-06.0-L-06-2-A-K-TR SEAF-50-06.0-L-04-2-

A-K-TR SEAF-10-05.0-S-04-2-A-K-TR SEAF-40-05.0-L-04-1-A-K-TR SEAF-40-06.0-S-10-2-A-K-TR
SEAF-40-06.5-L06-2-A-K-TR SEAF-40-05.0-S-08-1-A-K-TR SEAF-30-05.0-S-10-2-A-K-TR
SEAF-40-05.0-L-06-2-A-K-TR SEAF-50-

05.0-S-06-2-A-K-TR SEAF-20-06.5-L-10-2-A-K-TR SEAF-30-06.5-L-10-2-A-K-TR SEAF-20-06.0-S-06-2-A-K-

TR

SEAF-50-01-L-04-2-RA-GP-TR SEAF-50-06.0-S-06-2-A-K-TR SEAF-20-06.5-S-05-2-A-K-TR
SEAF-20-01-L-04-2-RAGP-TR SEAF-20-06.5-S-08-2-A-K-TR SEAF-40-06.0-L-10-2-A-K-TR
SEAF-50-05.0-L-04-2-A-K-TR SEAF-20-05.0-S04-2-A-K-TR SEAF-20-06.5-S-06-2-A-K-TR
SEAF-30-05.0-L-08-2-A-K-TR SEAF-40-05.0-L-10-2-A-K-TR SEAF-40-01-

L-10-2-RA-GP-TR SEAF-10-05.0-L-04-2-A-K-TR SEAF-50-05.0-L-08-2-A-K-TR SEAF-50-06.0-S-08-2-A-K-TR
SEAF40-05.0-S-04-2-A-K-TR SEAF-40-01-L-04-2-RA-GP-TR SEAF-50-06.0-L-06-2-A-K-TR
SEAF-40-01-L-04-1-RA-GP-TR

SEAF-30-05.0-L-04-2-A-K-TR SEAF-40-05.0-S-06-2-A-K-TR SEAF-40-05.0-S-10-1-A-K-TR
SEAF-30-05.0-S-04-2-AK-TR SEAF-30-06.5-L-08-2-A-K-TR SEAF-40-06.5-S-04-2-A-K-TR
SEAF-20-06.0-L-04-2-A-K-TR SEAF-30-05.0-L-06-

2-A-LP-K-TR SEAF-20-05.0-L-08-2-A-K-TR SEAF-50-01-L-04-2-RA-TR SEAF-40-05.0-S-10-2-A-K-TR
SEAF-30-01-L04-2-RA-GP-TR SEAF-50-06.5-S-08-2-A-K-TR SEAF-20-05.0-L-08-1-A-K-TR
SEAF-50-06.5-L-10-2-A-K-TR SEAF40-05.0-L-04-2-A-K-TR SEAF-50-01-S-10-2-RA-GP-K-TR
SEAF-30-06.5-S-04-2-A-K-TR SEAF-30-06.5-S-08-2-A-K-TR