

m spa1-525-1x/v0 vt-vspa1k-1-1x/ vt-m spa1-50-1x/v0/0-24 vt-m spa1-50-1x/v001 vt-m spa2-1-1x/v0/0 vt-
m spa2-200-1x/v0/0 vt3002-2x/48f vt3002-2x/64g vt-sspa1-508-2x/v0 vt-sspa1-508-2x/v0/i vt-sspa1-525-2x/v0 vt-
sspa1-50-1x/v0/0-24 vt-pvpq1-1x/2r900070872 vt-vpcd-1-1x/v0/1-p-1 vt-vpcd-1-1x/v0/1-d-1 vt-
vpcd-1-1x/v0/1-c-1 vt-vpcd-1-1x/v100/1-0-1 vt5002-2x/r5e vt5011/12-3x/r5e vt5000-2x/r1e vt5013-3x/r5e
vt5015-3x/r5e vt5016-3x/r5e vt5017-3x/r5e vt11382-1x/ vt3030-1x/ vt3031-1x/ vt3033-1x/ vt3034-1x/ vt3036-1x/
vt3037-1x/ vt13041-1x/ vt13005-1x/ vt11110-1x/ vt3017-3x/ vt3018-3x/ vt5066-1x/r1e vt-vrm1-1-1x/ vt11122-1x/
vt11123-1x/ vt17128-1x/1 vt17130-3x/ vt11166-1x/ vt11459-4x/ vt-hnc100-2-2x/w-16-0-0 hcs03.1e-
w0210-a-05-nnnv vt11246-2-1x/ vt2010s-4x/e vt15300-1x/ vt5040s-3x/45 vt12270-1x/21 hcs02.1e-w0012-a-03-nnnn
hcs02.1e-w0028-a-03-nnnn hcs02.1e-w0070-a-03-nnnn hcs03.1e-w0070-a-05-nnnv hcs03.1e-w0100-a-05-nnnv
hcs03.1e-w0150-a-05-nnnv vt16000-2x/vt12302-2x/hms01.1n-w0020-nnnn hms01.1n-w0036-nnnn hms01.1n-
w0054-nnnn hms01.1n-w0070-nnnn dkc01.3-200-7-fw dkc03.3-200-7-fw dkc11.1-404-7-fw dds2.1-w150-d
dds2.1-w200-d hms01.1n-w0110-nnnn hms01.1n-w0150-nnnn hms01.1n-w0210-nnnn hms01.1n-
w0350-nnnn hmd01.1n-w0012-nnnn hmd01.1n-w0020-nnnn hmd01.1n-w0036-nnnn hmv01.1e-
w0030-nnnn hmv01.1e-w0075-nnnn hmv01.1e-w0120-nnnn hmv01.1r-w0018-nnnn hmv01.1r-w0045-nnnn
hmv01.1r-w0065-nnnn hmv01.1r-w0120-nnnn vt-swka-1-1x/v0/0 电位器 vt10468-3x/b0-ro
vt10468-3x/f5-rx vt10468-3x/f4-r0 vt10468-3x/f6-rx vt10460-3x/bxy-0s-roo vt10460-3x/fxy-2k-rxy
vt10460-3x/b0y-6k-rxy vt10399-5x/bxy-b80t-r00 vt10399-5x/fxy-d90a-rxy vt10399-5x/b0y-c9ra-rxy
vt10399-5x/bx0-c80t-r00 19英寸安装机柜 vt19101-1x/1 vt19101-1x/2 vt19102-1x/1 vt19102-1x/2
vt19103-1x/1 vt19103-1x/2 vt19110-1x/1 vt19110-1x/2 vt19110-1x/3 vt19110-1x/4 vt19110-1x/5
vt19110-1x/6 连接适配器 vt10812-2x/32d vt10812-2x/48f vt10812-2x/64g 安装机架
vt3002-2x/15h vt3002-2x/32d vt3002-2x/48f vt3002-2x/64g 密封式电路板安装机架 vt12302-3x
电源单元 vt-ne1-3x/k24-220 vt-ne1-3x/k24-110 vt-ne1-3x/k20-220 vt-ne1-3x/k20-110 vt-
ne1-3x/s20-110 vt-ne1-3x/s24-110 vt-ne3-3x/k24-220 vt-ne3-3x/k24-110 vt-ne3/k20-220 vt-
ne3-3x/k20-110 稳压电源 vt-se1-3x vt-se3-3x 电源单元nt3 vts0908s1x/1
vts0908s1x/2 集成式电源 vt-ne30-1x vt-ne31-1x vt-ne32-1x 电源 0811405151
卡座 1834486000 双插槽 1817218004 带卡连接插头电源 0811405111
带电源机箱 1817218007 电源滤波器 0811405109 电源板 dc/dc-apc
0811405146 伺服阀测试单元 vt-svtsy-1-1x/1-0-0-0-0 vt-svtsy-1-1x/1-0-0-0-1 vt-
svtsy-1-1x/1-0-0-1-0 vt-svtsy-1-1x/1-0-0-1-1 vt-svtsy-1-1x/1-0-1-0-0 vt-svtsy-1-1x/1-0-1-0-1 vt-
svtsy-1-1x/1-1-0-0-0 vt-svtsy-1-1x/1-1-1-0-0 vt-svtsy-1-1x/1-1-0-1-0 vt-svtsy-1-1x/1-1-1-1-1
带集成电路的伺服阀及比例阀的试验单元 vt-vetsy-1-1x/1-0-0-0-0 vt-vetsy-1-1x/1-0-0-0-1 vt-
vetsy-1-1x/1-0-0-1-0 vt-vetsy-1-1x/1-0-0-1-1 vt-vetsy-1-1x/1-0-1-0-0 vt-vetsy-1-1x/1-0-1-0-1 vt-
vetsy-1-1x/1-0-1-1-0 vt-vetsy-1-1x/1-0-1-1-1 vt-vetsy-1-1x/1-1-0-0-0 vt-vetsy-1-1x/1-1-0-1-0 vt-
vetsy-1-1x/1-2-0-0-0 vt-vetsy-1-1x/1-2-0-0-1 vt-vetsy-1-1x/1-2-0-1-1 vt-vetsy-1-1x/1-2-0-1-0
控制系统 vt-hnc100demo-2x/0-1 vt-hnc100demo-2x/1-1 vt-hnc100demo-2x/p-1 vt-
hnc100demo-2x/c-1 vt-hnc100demo-2x/i-1 检测盒 vt-pe-tb1 订货代码 0811 405 166
vt-pe-tb2 订货代码 0811 405 167 vt-pe-tb3 订货代码 0811 405 168 用于obe的检测接头
vt-pa-1 订货代码 0811 405 118 vt-pa-2 订货代码 0811 405 163 vt-pa-3 订货代码 0811 405 114
pc插件板pce 5 vts0985-1x/20a00 vts0985-1x/20a01 vts0985-1x/20a02 vts0985-1x/20a03
vts0985-1x/20b00 vts0985-1x/20b01 vts0985-1x/20b02 vts0985-1x/20b03 vts0985-1x/33a00 vts0985-1x/33b00
vts0985-1x/66b00 vts0985-1x/66b03 负载反向集合软件包lwk2.0 vts0325-1x/0 vts0325-1x/1
测试和闭环电气控制系统 工作模式选择控制器 bas1 (vts0301型) 控制板 vr3d (vts0237型)
远程控制板 fern1 (vts0318型) 远程控制箱 fbos (vts0727型) 液压控制电子仪hce
syhce1-2x/t1e0v0s0t0t0m0v0v0s0t0t6m1 syhce1-2x/t1e0v0s0t0t0m0v0v0s0t5t0m0
syhce1-2x/b1e0v0s0t0t0m0v0v0s0t7t8m0 syhce1-2x/b1e0v0s0t7t8m0v0v0s0t5t6m1
syhce1-2x/b1e0v0s0t7t8m0v0v0s0t0t1m0 syhce1-2x/b1e0v3s0t7t8m0v0v0s0t0t5m1
syhce1-2x/b1e0v0s3t7t8m0v0v0s0t0t7m0 syhce1-2x/b1e0v0s1t7t8m0v0v0s0t5t5m1
通讯与监测单元ku-1 vt-ku-1-1x/232 vt-ku-1-1x/485 测试转接卡bk带后接插卡przbo
vts0404-1x/s vts0404-1x/r vts0219-1x bk2数据测量采集插卡 vt-bk-2-1x
载频测量放大器tf6207 vts0161-1x 后接插卡przbo vts0219-1x 载频测量放大器tf6208 vts0162-1x
后接插卡przbo vts0219-1x 电子放大器sr91, 用于带电反馈的伺服阀 vts0615-1x/4ws2ee10-4x

电子放大器sr92，用于带机械反馈伺服阀 vts0616-1x/4wszem10-4x

电子放大器sr98，用于带机械反馈伺服阀 vts0617-1x/4ws2em6-1x vts0617-1x/4ws2em16-2x