

工控机D/A I/O A/D 板卡

产品名称	工控机D/A I/O A/D 板卡
公司名称	承德市联创计控设备有限公司
价格	2000.00/台
规格参数	品牌:承德联创 型号:LC 准确度等级:1
公司地址	承德开发区东区
联系电话	0314-5902009 13832401271

产品详情

品牌	承德联创	型号	LC
准确度等级	1	皮带倾角	1 (°)
过载能力	11111 (%)	环境温度	111 ()
环境湿度	111 (%)	电源电压	220 (V)

printing and displaying system of weighfeeder user ' s guide

1. brief instruction

this system is a system that provides running mode, grinding mode and dynamic mode on a computer screen, as a result the current modes of equipments can be seen at a glance. the actual feed rate, current output and the last output are displayed on the screen of the computer as well. it can print all the values mentioned above and the parameter sheet. in any case, the system applies an accurate basic data for the economic and quality management.

2. operating and displaying

1)start

turn on the power of the computer, then “ printing and displaying system of weigh feeder ” is appeared. click the related sub-interface, then the corresponding sub-interface is opened.

2)displaying and operating for running the sub-system interface

displaying contents:

the 1st line----collective fault lamps of each weigh feeder

the 2nd line ----actual feed rate of each weigh feeder

the 3rd line ----names of materials conveyed by each weigh feeder

the 4th line ----appearance drawing of each weigh feeder

the 5th line ---- feeding mode of each weigh feeder

the 6th line ---- appearance and running modes of belt

the 7th line ---- accumulation output value of each weigh feeder

the 8th line ---- appearance drawings of the control computer and the grinder and also running mode of the grinder and the feed rate at the entrance of the grinder (the total actual feed rate of the three weigh feeders)

the 9th line ---- clearance buttons and conform buttons to clear all the displayed troubles

operating

once a trouble displayed, double-click “ conform(故障应答) ” button .if there is still alarm, check the equipment by trained person please.

3. displaying interface of the alarm sheet

the alarm details are displayed here.

4. displaying and operating for setting parameters

displaying contents

all the system parameters of each weigh feeder are displayed here.

operating

click the corresponding number to modify the parameter. the number will turn into a white box. then you can enter the new data by the keyboard. after the data is entered, press the enter key, thus the new data will be appeared on the screen.

the formulation of actual feed rate

displayed value = {[imitated value (input value v)- zero point value (v)]/reading value from the flow meter (v)}* rated value of the feed rate (t/h)

5. displaying and operating for printing sheets

displaying contents

“ selection button (选择按钮) ” , “ view button (浏览按钮) ” and “ print button (打印按钮) ” are displayed here.

operating

click the “ selection button (选择按钮) ” to select what you want to view and print.

click the “ view button (浏览按钮) ” to view what you want.

click the quit/exit in the menu to return to last interface.

click “ print button (打印按钮) ” to print what is selected.

6. output interface

displaying contents

the current output and the total outputs of the current shift are displayed here, the last output and the total outputs of the last shift are also displayed, and the clearance button of the counter as well.

operating

click the “ clearance button of the counter (计数器清零按钮) ” when relief of shift. the output value of the current shift is sent to the output counter of the last shift, the output value of the last shift will be lost. the output counter of the current shift will be cleared out. another turn of weighing starts.

7. stop

click right key of the mouse, a sub-menu is appeared. then click the return button by left key, you will be back to the main interface; click the right key of the mouse in the main menu, there will be sub-menu; then click the quit/exit button to return to the interface of windows98, click “ start button (开始按钮) ” here, then “ close button (关闭按钮) ”, you can power off when “ you can close the computer safely now (现在可以安全的关闭计算机了) ” is appeared. .

system parameters sheet

no.	parameters	value	unit	note
1	zero point value of the feed rate for gypsum	1	v	
2	zero point value of the feed rate for ore slag	1	v	
3	zero point value of the feed rate for treated materials	1	v	
4	reading value of the feed rate for gypsum	4	v	
5	reading value of the feed rate for ore slag	4	v	
6	reading value of the feed rate for treated materials	4	v	
7	rated value of the feed rate for gypsum	6	t/h	
8	rated value of the feed rate for ore slag	12	t/h	
9	rated value of the feed rate for treated materials	100	t/h	
10	maximum of the feed rate for gypsum	12	t/h	
11	maximum of the feed rate for ore slag	24	t/h	
12	maximum of the feed rate for treated materials	200	t/h	

13	minimum of the feed rate for gypsum	0	t/h	
14	minimum of the feed rate for ore slag	0	t/h	
15	minimum of the feed rate for treated materials	0	t/h	