

PVTVM派利斯TM0180-05-05-03-10-02 传感器

产品名称	PVTVM派利斯TM0180-05-05-03-10-02 传感器
公司名称	南京安其罗电气有限责任公司
价格	232.00/个
规格参数	品牌:PVTVM派利斯 型号:TM0180-05-05 产地:美国
公司地址	南京市建邺区嘉陵江东街18号04幢2层205-94室（注册地址）
联系电话	18551734289

产品详情

PVTVM派利斯TM0180-05-05-03-10-02 传感器

南京安其罗电气有限责任公司

振动变送表TM101-A06-B00-C00-D00-E00-G00-H00TM611-A06-B00-C00-D00-E00-G00-H00-I0-M1

振动变送表TM101-A06-B01-C00-D00-E00-G00-H00TM611-A06-B01-C00-D00-E00-G00-H00-I0-M1

振动变送表TM101-A06-B00-C00-D00-E00-G00-H01TM611-A06-B00-C00-D00-E00-G00-H01-I0-M1

振动变送表TM101-A08-B00-C00-D00-E00-G00-H00TM611-A08-B00-C00-D00-E00-G00-H00-I0-M1

振动变送表TM101-A00-B00-C00-D00-E00-G00TM611-A00-B00-C00-D00-E00-G00-H00-I0-M1

轴振动变送保护表TM201-A00-B00-C00-D00-E00-G00TM621-A00-B00-C00-D00-E00-G00-I0-M1

轴振动变送保护表TM201-A00-B01-C00-D00-E00-G00TM621-A00-B01-C00-D00-E00-G00-I0-M1

轴振动变送保护表TM201-A01-B00-C00-D00-E00-G00TM621-A01-B00-C00-D00-E00-G00-I0-M1

轴振动变送保护表TM201-A01-B01-C00-D00-E00-G00TM621-A01-B01-C00-D00-E00-G00-I0-M1

轴振动变送保护表TM201-A02-B00-C00-D00-E00-G00TM621-A02-B00-C00-D00-E00-G00-I0-M1

振动变送表TM201-A02-B01-C00-D00-E00-G00TM621-A02-B01-C00-D00-E00-G00-I0-M1

位移变送表TM202-A00-B00-C00-D00-E00-G00TM622-A00-B00-C00-D00-E00-G00

位移变送表TM202-A00-B00-C00-D00-E01-G00TM622-A00-B00-C00-D00-E01-G00

位移变送表TM202-A00-B00-C02-D00-E00-G00TM622-A00-B00-C02-D00-E00-G00

位移变送表TM202-A01-B00-C00-D00-E00-G00TM622-A01-B00-C00-D00-E00-G00

位移变送表TM202-A02-B00-C00-D00-E00-G00TM622-A02-B00-C00-D00-E00-G00

位移变送表TM202-A02-B00-C00-D00-E01-G00TM622-A02-B00-C00-D00-E01-G00

位移变送表TM202-A02-B00-C02-D00-E00-G00TM622-A02-B00-C02-D00-E00-G00

位移变送表TM202-A03-B00-C00-D00-E00-G00TM622-A03-B00-C00-D00-E00-G00

系统集成模块YTM391-B00-G00可带六块仪表TM691-B00-G00可带八块仪表

振动变送表TM301-A00-B00-C02-D00-E00-F00-G00 TM631-A00-B00-C02-D00-E00-F00-G00-I0-M1

轴振动变送保护表YTM301-A00-B00-C00-D00-E00-F00-G00TM631-A00-B00-C00-D00-E00-F00-G00-I0-M1

振动变送保护表TM301-A02-B00-C02-D00-E00-F00-G00 TM631-A02-B00-C00-D00-E00-F00-G00-I0-M1

振动变送保护表YTM301-A02-B00-C02-D00-E00-F00-G00TM631-A02-B00-C02-D00-E00-F00-G00-I0-M1

振动变送保护表YTM301-A00-B00-C00-D00-E02-F00-G00TM631-A00-B00-C00-D00-E02-F00-G00-I0-M1

位移变送保护表TM302-A00-B00-C02-D00-E00-F00-G00TM632-A00-B00-C02-D00-E00-F00-G00

位移变送保护表YTM302-A00-B00-C00-D00-E00-F00-G00TM632-A00-B00-C00-D00-E00-F00-G00

轴位移变送保护表YTM302-A00-B00-C00-D00-E01-F00-G00TM632-A00-B00-C00-D00-E01-F00-G00

轴位移变送保护表TR4101-A03-E02-G00-S00 TR4101-A03-E02-G00-S00

轴位移变送保护表TR4101-A00-E00-G00-S00TR4101-A00-E00-G00-S00

轴位移变送保护表TR4102-E00-G00-S00TR4102-E00-G00-S00

轴位移变送保护表TR4105-A01-E00-F00-G00-S00TR4105-A01-E00-F00-G00-S00

位移变送表TM501-A03-B00-C00-D00-E00-F00-G00TM635-A03-B00-C00-D00-E00-F00-G00

延长电缆 TM0181-A40-B00 TM0181-040-00

延长电缆 TM0181-A45-B00 TM0181-045-00

延长电缆 TM0181-040-00TM0181-040-00

延长电缆 TM0181-A40-B01TM0181-040-01

延长电缆 TM0181-A80-B00TM0181-080-00

TM0180-A05-B05-C03-D05TM0180-05-05-03-05-02

振动探头 TM0180-A05-B05-C03-D10 TM0180-05-05-03-10-02派利斯

TM0180-07-00-05-10-02派利斯

振动探头 TM0180-A07-B00-C04-D10TM0180-07-00-04-10-02

位移探头TM0180-A07-B00-C06-D05 TM0180-07-00-06-05-02

振动探头TM0180-A07-B05-C03-D10 TM0180-07-05-03-10-02

涡街探头TM0180-A07-B00-C04-D05TM0180-07-00-04-05-02

涡街探头TM0180-A07-B00-C05-D05TM0180-07-00-05-05-02

涡街探头TM0180-A07-B00-C05-D10TM0180-07-00-05-10-02

涡街探头TM0180-A07-B00-C08-D05TM0180-07-00-08-05-02

振动探头TM0180-A07-B00-C10-D10TM0180-07-00-10-10-02

振动探头TM0180-07-00-13-10-02TM0180-07-05-13-10-02派利斯

振动探头TM0180-07-00-15-05-02

振动探头TM0180-07-00-16-10-02

振动探头TM0180-07-13-19-05-02

振动探头TM0180-07-16-22-05-02

振动探头TM0180-A08-B00-C04-D05TM0180-08-00-04-05-02

振动探头TM0180-A08-B00-C05-D10 TM0180-08-00-05-10-02

振动探头TM0180-A08-B00-C06-D10

振动探头TM0180-08-00-07-05-02

TM0180-A08-B08-C17-D05TM0180-08-08-17-05-02

TM0180-A08-B11-C20-D05TM0180-08-11-20-05-02

安装附件TM0393X-105-000-0-0(105mm)

安装附件TM0393X-110-000-0-0(110mm)TM0393X-110-000-0-0

安装附件TM0393X-160-000-0-0(160mm)

安装附件TM0393X-215-000-0-0(215mm)

安装附件TM0393X-290-000-0-0(290mm)

安装附件TM0393X-365-000-0-0(365mm)

传感器TM0782A-KTM0782A加速度探头套件（含MIL铝插头套件及五米电缆）

TM0182-A50-B00-C00