

Foreign trade floor heating thermostat manual 外贸地暖温控器说明书

产品名称	Foreign trade floor heating thermostat manual 外贸地暖温控器说明书
公司名称	拓森（厦门）节能设备有限公司
价格	1.00/套
规格参数	外贸温控器1:地暖温控器 外贸温控器2:电采暖温控器 外贸温控器3:中央空调温控器
公司地址	厦门市翔安区火炬高新区建业楼L208A
联系电话	18559823009

产品详情

Floor heating thermostat manual

An overview

- 1.The weekly programming heating thermostat adopts the latest single-chip microcomputer control technology, with high reliability and strong anti-interference.
- 2.suitable for electric heating equipment and water system heating electric actuator, electric valve control or wall furnace control.
- 3.It can be programmed in 8 time periods every day, and it adopts 5+1+1 to program independently in 24 time periods.
- 4.You can choose manual control or automatic timing control
- 5.Keyboard lock function to prevent children from misoperation
- 6.Fire retardant material, safe and reliable, fashionable appearance, easy to clean mirror.
7. External temperature sensor, 3m line length (optional).

Technical reference

- 1.The power input:220V AC \pm 15%,50/60Hz
- 2.The maximum switching current of electric heating is16A;The maximum switching current of water heating is 3A
- 3.The built-in sensor setting range:5-90 (adjustable)
- 4.The built-in sensor measurement range:0-90
- 5.External sensor measurement range:0-90
- 6.Self consuming power:<1.2W
- 7.Built-in sensor:thermistorB=3470 5k@25degree
- 8.Set step:1
- 9.External sensor:thermistorB=3470 5k@25degree
- 10.Temperature control accuracy: \pm 1
- 11.Product net weight:211g
- 12.External dimension:86*90*13mm

Dimensions and installation drawings

- 1.The screwdriver inserts the notch and removes the outer frame.
- 2.Screw driver ejecting stainless steel clip spring, remove and install iron support.
- 3.Screw driver mounting iron bracket to cassette.
- 4.After completing the electrical connection, plug in the thermostat, screw driver into the stainless steel clip spring, install to the iron bracket, buckle the outer frame, complete the installation

Electrical heating wiring diagram

Floor heating wiring diagram