

# ABB软启动器 PST300-600-70,1SFA894014R7000

产品名称	ABB软启动器 PST300-600-70,1SFA894014R7000
公司名称	北京域能汇通科技有限公司
价格	9999.00/个
规格参数	品牌:ABB 型号:PST300-60070 产地:瑞典
公司地址	北京市朝阳区立清路8号3-2205
联系电话	86-010-65911327-101 18614088757

## 产品详情

ABB软启动器 PST300-600-70,1SFA894014R7000

1SFA893006R1002 ABB PSS60/105-690L ABB软启动器 F-Rel=1S

1SFA893006R2002 ABB PSS60/105-690LC ABB软启动器 F-Rel=1

1SFA893007R1001 ABB PSS72/124-690F ABB软启动器 F-Rel=1S

1SFA893007R1002 ABB PSS72/124-690L ABB软启动器 F-Rel=1S

1SFA893007R2002 ABB PSS72/124-690LC ABB软启动器 F-Rel=1

1SFA893008R1001 ABB PSS85/147-690F ABB软启动器 F-Rel=1S

1SFA893008R1002 ABB PSS85/147-690L ABB软启动器 F-Rel=1S

1SFA893009R1001 ABB PSS105/181-690F ABB软启动器 F-Rel=1S

1SFA893009R1002 ABB PSS105/181-690L ABB软启动器 F-Rel=1S

1SFA893010R1001 ABB PSS142/245-690F ABB软启动器 F-Rel=1S

1SFA893010R1002 ABB PSS142/245-690L ABB软启动器 F-Rel=1S

1SFA893010R2002 ABB PSS142/245-690LC ABB软启动器 F-Rel=1

1SFA893011R1001 ABB PSS175/300-690F ABB软启动器 F-Rel=1S

1SFA893011R1002 ABB PSS175/300-690L ABB软启动器 F-Rel=1S

1SFA893011R2001 ABB PSS175/300-690 ABB软启动器 F-Rel=1

1SFA893011R2002 ABB PSS175/300-690LC ABB软启动器 F-Rel=1OE

1SFA893013R1001 ABB PSS250/430-690F ABB软启动器 F-Rel=1S

1SFA893013R1002 ABB PSS250/430-690L ABB软启动器 F-Rel=1S

1SFA893014R1001 ABB PSS300/515-690F ABB软启动器 F-Rel=1S

1SFA893014R1002 ABB PSS300/515-690L ABB软启动器 F-Rel=1S

1SFA893014R2002 ABB PSS300/515-690LC400-690B Softstarter

1SFA894002R7000 ABB PST30-600-70 ABB软启动器 230-600V

1SFA894002R7020 ABB PST30-600-70

1SFA894003R7000 ABB PST37-600-70 ABB软启动器 230-600V

1SFA894004R7000 ABB PST44-600-70 ABB软启动器 230-600V

1SFA894005R7000 ABB PST50-600-70 ABB软启动器 230-600V

1SFA894006R7000 ABB PST60-600-70 ABB软启动器 230-600V

1SFA894007R7000 ABB PST72-600-70 ABB软启动器 230-600V

1SFA894007R7020 ABB PSTB72-600-70

1SFA894008R7000 ABB PST85-600-70 ABB软启动器 230-600V

1SFA894008R7020 ABB PST85-600-70T Softstarter

1SFA894009R7000 ABB PST105-600-70 ABB软启动器 230-600V

1SFA894010R7000 ABB PST142-600-70 ABB软启动器 230-600V

1SFA894011R7000 ABB PST175-600-70 ABB软启动器 230-600V

1SFA894011R7020 ABB PST175-600-70

1SFA894012R7000 ABB PST210-600-70 ABB软启动器 230-600V

1SFA894013R7000 ABB PST250-600-70 ABB软启动器 230-600V

1SFA894014R7000 ABB PST300-600-70 ABB软启动器 230-600V

1SFA894014R7009 ABB DUMMY\_PST300-70D

1SFA894015R7000 ABB PSTB370-600-70 ABB软启动器 230-600V

1SFA894015R7020 ABB PSTB370-600-70T softstarter

1SFA894016R7000 ABB PSTB470-600-70 ABB软启动器 230-600V

1SFA894016R7020 ABB PSTB470-600-70

1SFA894017R7000 ABB PSTB570-600-70 ABB软启动器 230-600V

1SFA894018R7000 ABB PSTB720-600-70 ABB软启动器 230-600V

1SFA894018R7020 ABB PSTB 720-600-70T Softstarter

1SFA894019R7000 ABB PSTB840-600-70 ABB软启动器 230-600V

1SFA894019R7020 ABB PSTB 840-600-70T Softstarter

1SFA894020R7000 ABB PSTB1050-600-70 ABB软启动器 230-600V

1SFA895002R7000 ABB PST30-690-70 ABB软启动器 400-690V

1SFA895002R7020 ABB PST30-690-70T ABB软启动器 400-690V

1SFA895003R7000 ABB PST37-690-70 ABB软启动器 400-690V

1SFA895003R7020 ABB PST37-690-70T ABB软启动器 400-690V

1SFA895004R7000 ABB PST44-690-70 ABB软启动器 400-690V

1SFA895004R7020 ABB PST44-690-70T ABB软启动器 400-690V

1SFA895005R7000 ABB PST50-690-70 ABB软启动器 400-690V

1SFA895005R7020 ABB PST50-690-70T ABB软启动器 400-690V

1SFA895006R7000 ABB PST60-690-70 ABB软启动器 400-690V

1SFA895006R7020 ABB PST60-690-70T ABB软启动器 400-690V

1SFA895007R7000 ABB PST72-690-70 ABB软启动器 400-690V

1SFA895007R7020 ABB PST72-690-70T ABB软启动器 400-690V

1SFA895008R7000 ABB PST85-690-70 ABB软启动器 400-690V

1SFA895008R7020 ABB PST85-690-70T ABB软启动器 400-690V

1SFA895009R7000 ABB PST105-690-70 ABB软启动器 400-690V

1SFA895009R7020 ABB PST105-690-70T ABB软启动器 400-690V

1SFA895010R7000 ABB PST142-690-70 ABB软启动器 400-690V

1SFA895010R7020 ABB PST142-690-70T ABB软启动器 400-690V

1SFA895011R7000 ABB PST175-690-70 ABB软启动器 400-690V

1SFA895011R7020 ABB PST175-690-70T ABB软启动器 400-690V

1SFA895012R7000 ABB PST210-690-70 ABB软启动器 400-690V

1SFA895012R7020 ABB PST210-690-70T ABB软启动器 400-690V

1SFA895013R7000 ABB PST250-690-70 ABB软启动器 400-690V

1SFA895013R7020 ABB PST250-690-70T ABB软启动器 400-690V

1SFA895014R7000 ABB PST300-690-70 ABB软启动器 400-690V

1SFA895014R7020 ABB PST300-690-70T ABB软启动器 400-690V

1SFA895015R7000 ABB PSTB370-690-70 ABB软启动器 400-690V

1SFA895015R7020 ABB PSTB370-690-70T ABB软启动器 400-690V

1SFA895016R7000 ABB PSTB470-690-70 ABB软启动器 400-690V

1SFA895016R7020 ABB PSTB470-690-70

1SFA895017R7000 ABB PSTB570-690-70 ABB软启动器 400-690V

1SFA895017R7020 ABB PSTB570-690-70T ABB软启动器 400-690V

1SFA895018R7000 ABB PSTB720-690-70 ABB软启动器 400-690V

1SFA895018R7020 ABB PSTB720-690-70T ABB软启动器 400-690V

1SFA895019R7000 ABB PSTB840-690-70 ABB软启动器 400-690V

1SFA895019R7020 ABB PSTB840-690-70T ABB软启动器 400-690V

1SFA895020R7000 ABB PSTB1050-690-70 ABB软启动器 400-690V

1SFA895020R7020 ABB PSTB1050-690-70T ABB软启动器 400-690V

1SFA896103R1100 ABB PSR3-600-11Softstarter

1SFA896103R7000 ABB PSR3-600-70 ABB软启动器 100-240VAC

1SFA896104R1100 ABB PSR6-600-11Softstarter

1SFA896104R7000 ABB PSR6-600-70 ABB软启动器 100-240VAC

1SFA896104R8100 ABB PSR6-600-81 ABB软启动器 24VDC

1SFA896105R1100 ABB PSR9-600-11Softstarter

1SFA896105R7000 ABB PSR9-600-70 ABB软启动器 100-240VAC

1SFA896105R8100 ABB PSR9-600-81 ABB软启动器 24VDC

1SFA96106R1100 ABB PSR12-600-11Softstarter

1SFA896106R7000 ABB PSR12-600-70 ABB软启动器 100-240VAC

1SFA896107R7000 ABB PSR16-600-70 ABB软启动器 100-240VAC

1SFA896107R8100 ABB PSR16-600-81 ABB软启动器 24VDC

1SFA896108R1100 ABB PSR25-600-11Softstarter

1SFA896108R7000 ABB PSR25-600-70 ABB软启动器 100-240VAC

1SFA896109R1100 ABB PSR30-600-11Softstarter

1SFA896109R7000 ABB PSR30-600-70 ABB软启动器 100-240VAC

1SFA896109R8100 ABB PSR30-600-81 ABB软启动器 24VDC

1SFA896110R1100 ABB PSR37-600-11Softstarter

1SFA896110R7000 ABB PSR37-600-70 ABB软启动器 100-240VAC

1SFA896110R8100 ABB PSR37-600-81 ABB软启动器 24VDC

1SFA896111R1100 ABB PSR45-600-11Softstarter

1SFA896111R7000 ABB PSR45-600-70 ABB软启动器 100-240VAC

1SFA896111R8100 ABB PSR45-600-81 ABB软启动器 24VDC

1SFA896112R1100 ABB PSR60-600-11Softstarter

1SFA896112R7000 ABB PSR60-600-70 ABB软启动器 100-240VAC

1SFA896113R1100 ABB PSR72-600-11Softstarter

1SFA896113R7000 ABB PSR72-600-70 ABB软启动器 100-240VAC

1SFA896114R1100 ABB PSR85-600-11Softstarter

1SFA896114R7000 ABB PSR85-600-70 ABB软启动器 100-240VAC

1SFA896114R8100 ABB PSR85-600-81 ABB软启动器 24VDC40VAC

1SFA896115R1100 ABB PSR105-600-11 Softstarter

1SFA896115R7000 ABB PSR105-600-70 ABB软启动器 100-240VAC

1SFA896115R8100 ABB PSR105-600-81 ABB软启动器 24VDC40VAC

1SFA896211R1001 ABB Verb.-Adapter PSR3-16 mit MS116-MS132

1SFA896212R1001 ABB Verb.-Adapter PSR25-30 mit MS132

1SFA896213R1001 ABB Verb.-Adapter PSR37-45 mit MS450

1SFA896312R1002 ABB PSR-FBPA FBP Verbindungseinheit.

1SFA897100R1001 ABB PSEEK externes Tastenfeld PSE18...370

1SFA897101R7000 ABB PSE18-600-70 Softstarter

1SFA897102R7000 ABB PSE25-600-70 Softstarter

1SFA897103R7000 ABB PSE30-600-70 Softstarter

1SFA897104R7000 ABB PSE37-600-70 Softstarter

1SFA897105R7000 ABB PSE45-600-70 Softstarter

1SFA897106R7000 ABB PSE60-600-70 Softstarter

1SFA897107R7000 ABB PSE72-600-70 Softstarter

1SFA897108R7000 ABB PSE85-600-70 Softstarter

1SFA897109R7000 ABB PSE105-600-70 Softstarter

1SFA897110R7000 ABB PSE142-600-70 Softstarter

1SFA897111R7000 ABB PSE170-600-70 Softstarter

1SFA897112R7000 ABB PSE210-600-70 Softstarter

1SFA897113R7000 ABB PSE250-600-70 Softstarter

1SFA897114R7000 ABB PSE300-600-70 Softstarter

1SFA897115R7000 ABB PSE370-600-70 Softstarter

1SFA899002R1044 ABB PSLW-44 Klemmenvergrößerung

1SFA899002R1072 ABB PSLW-72 Klemmenvergrößerung

1SFA899003R1000 ABB PSTEK Ext.Bedientableau f.ABB软启动器

1SFA899004R1000 ABB PSTM-2 Einbausatz f.Schiffmont.PST85-142

1SFA899012R1002 ABB PSPB-2 Montagesatz

1SFA891002R4009 ABB SOFTSTARTER PS S 12-400B 12A, 24-110VACD

1SFA892001R1001 ABB PSS18/30-500F ABB软启动器 F-Rel=1S

1SFA892001R1002 ABB PSS18/30-500L ABB软启动器 F-Rel=1S

1SFA892001R2001 ABB PSS18/30-500FC ABB软启动器 F-Rel=1

1SFA892001R2002 ABB PSS18/30-500LC ABB软启动器 F-Rel=1

1SFA892002R1001 ABB PSS30/52-500F ABB软启动器 F-Rel=1S

1SFA892002R1002 ABB PSS30/52-500L ABB软启动器 F-Rel=1S

1SFA892002R2001 ABB PSS30/52-500FC ABB软启动器 F-Rel=1

1SFA892002R2002 ABB PSS30/52-500LC ABB软启动器 F-Rel=1

1SFA892003R1001 ABB PSS37/64-500F ABB软启动器 F-Rel=1S

1SFA892003R1002 ABB PSS37/64-500L ABB软启动器 F-Rel=1S

1SFA892003R2001 ABB PSS37/64-500FC ABB软启动器 F-Rel=1

1SFA892003R2002 ABB PSS37/64-500LC ABB软启动器 F-Rel=1

1SFA892004R1001 ABB PSS44/76-500F ABB软启动器 F-Rel=1S

1SFA892004R1002 ABB PSS44/76-500L ABB软启动器 F-Rel=1S

1SFA892004R2001 ABB PSS44/76-500FC ABB软启动器 F-Rel=1

1SFA892004R2002 ABB PSS44/76-500LC ABB软启动器 F-Rel=1

1SFA892005R1001 ABB PSS50/85-500F ABB软启动器 F-Rel=1S

1SFA892005R1002 ABB PSS50/85-500L ABB软启动器 F-Rel=1S

1SFA892005R2001 ABB PSS50/85-500FC ABB软启动器 F-Rel=1

1SFA892005R2002 ABB PSS50/85-500LC ABB软启动器 F-Rel=1

1SFA892006R1001 ABB PSS60/105-500FC ABB软启动器 F-Rel=1S

1SFA892006R1002 ABB PSS60/105-500L ABB软启动器 F-Rel=1S  
1SFA892006R2001 ABB PSS60/105-500L ABB软启动器 F-Rel=1  
1SFA892006R2002 ABB PSS60/105-500LC ABB软启动器 F-Rel=1  
1SFA892007R1001 ABB PSS72/124-500F ABB软启动器 F-Rel=1S  
1SFA892007R1002 ABB PSS72/124-500L ABB软启动器 F-Rel=1S  
1SFA892007R2001 ABB PSS72/124-500FC ABB软启动器 F-Rel=1  
1SFA892007R2002 ABB PSS72/124-500LC ABB软启动器 F-Rel=1  
1SFA892008R1001 ABB PSS85/147-500F ABB软启动器 F-Rel=1S  
1SFA892008R1002 ABB PSS85/147-500L ABB软启动器 F-Rel=1S  
1SFA892008R2001 ABB PSS85/147-500FC ABB软启动器 F-Rel=1  
1SFA892008R2002 ABB PSS85/147-500LC ABB软启动器 F-Rel=1  
1SFA892009R1001 ABB PSS105/181-500F ABB软启动器 F-Rel=1S  
1SFA892009R1002 ABB PSS105/181-500L ABB软启动器 F-Rel=1S  
1SFA892009R2001 ABB PSS105/181-500FC ABB软启动器 F-Rel=1  
1SFA892009R2002 ABB PSS105/181-500LC ABB软启动器 F-Rel=1  
1SFA892010R1001 ABB PSS142/245-500F ABB软启动器 F-Rel=1S  
1SFA892010R1002 ABB PSS142/245-500L ABB软启动器 F-Rel=1S  
1SFA892010R2001 ABB PSS142/245-500FC ABB软启动器 F-Rel=1  
1SFA892010R2002 ABB PSS142/245-500LC ABB软启动器 F-Rel=1  
1SFA892011R1001 ABB PSS175/300-500F ABB软启动器 F-Rel=1S  
1SFA892011R1002 ABB PSS175/300-500L ABB软启动器 F-Rel=1S  
1SFA892011R2001 ABB PSS175/300-500FC ABB软启动器 F-Rel=1  
1SFA892011R2002 ABB PSS175/300-500LC ABB软启动器 F-Rel=1  
1SFA892013R1001 ABB PSS250/430-500F ABB软启动器 F-Rel=1S  
1SFA892013R1002 ABB PSS250/430-500L ABB启动器 F-Rel=1S  
1SFA892013R2001 ABB PSS250/430-500FC ABB软启动器 F-Rel=1



1SFA892013R2002 ABB PSS250/430-500LC ABB软启动器 F-Rel=1

1SFA892014R1001 ABB PSS300/515-500F ABB软启动器 F-Rel=1S

1SFA892014R1002 ABB PSS300/515-500L ABB软启动器 F-Rel=1S

1SFA892014R2001 ABB PSS300/515-500FC ABB软启动器 F-Rel=1

1SFA892014R2002 ABB PSS300/515-500LC ABB软启动器 F-Rel=1

1SFA893001R1001 ABB PSS18/30-690F ABB软启动器 F-Rel=1S

1SFA893001R1002 ABB PSS18/30-690L ABB软启动器 F-Rel=1S

1SFA893001R2002 ABB PSS18/30-690LC ABB软启动器 F-Rel=1OE

1SFA893002R1001 ABB PSS30/52-690F ABB软启动器 F-Rel=1S