

M05B2P1TPBS000-MARATHON马拉松气动隔膜泵

产品名称	M05B2P1TPBS000-MARATHON马拉松气动隔膜泵
公司名称	昆山市卡纳工业设备有限公司
价格	9999.00/台
规格参数	品牌:MARATHON 型号:M05B2P1TPBS0 尺寸:1/2 ”
公司地址	江苏省昆山市杜家路300号B1
联系电话	0512-55106670 15051600064

产品详情

性能参数：

尺寸：1/2 ”

接液材料：聚丙烯

非接液材料：聚丙烯

隔膜材料：山道

流量：52LPM

每冲程排量：0.098L

含固粒径：3mm

扬程：8.6BAR

SANDPIPER气动隔膜泵常用型号：

S05金属泵：S05B1A1WABS000.S05B1A2TABS000.S05B1ABWABS000.S05B1ACTABS000.S05B1AHWABS000.

S05B1AZTABS000.S05B1ANWABS000.S05B1S1WABS000.S05B1S2TABS000.S05B1SBWABS000.

S05B1SCTABS000.S05B1SNWABS000.S05B1SZTABS000.

S1F金属泵：S1FB1A1WABS000.S1FB1A2TABS000.S1FB1ABWABS000.S1FB1ACTABS000.S1FB1AGTABS000.

S1FB1AHWABS000.S1FB1AIWABS000.S1FB1ANWABS000.S1FB1AZTABS000.S1FB1I1WABS000.

S1FB1I2TABS000.S1FB1IBWABS000.S1FB1ICTABS000.S1FB1IGTABS000.S1FB1IHWABS000.

S1FB1IIWABS000.S1FB1INWABS000.S1FB1IZTABS000.S1FB1S1WABS000.S1FB1S2TABS000.

S1FB1SBWABS000.S1FB1SCTABS000.S1FB1SGTABS000.S1FB1SHWABS000.S1FB1SIWABS000.

S1FB1SNWABS000.S1FB1SZTABS000.S1FB1AGTANS000.S1FB1SGTANS000

S15金属泵：S15B1A1WABS000.S15B1A2TABS000.S15B1ABWABS000.S15B1ACTABS000.S15B1AEWABS000.

S15B1AGTABS000.S15B1ANWABS000.S15B1AVWABS000.S15B1AZTABS000.S15B1I1WABS000.

S15B1I2TABS000.S15B1IBWABS000.S15B1ICTABS000.S15B1IEWABS000.S15B1IGTABS000.

S15B1INWABS000.S15B1IVWABS000.S15B1IZTABS000.S15B1S1WABS000.S15B1S2TABS000.

S15B1SBWABS000.S15B1SCTABS000.S15B1SEWABS000.S15B1SGTABS000.S15B1SNWABS000.

S15B1SVWABS000.S15B1SZTABS000.S15B1A1WANS000.S15B1ANWANS000.S15B1AGTANS000.

S15B1SGTANS000.

S20金属泵：S20B1A1EABS000.S20B1A2TABS000.S20B1ABBABS000.S20B1ACVABS000.S20B1AEEABS000.

S20B1AGTABS000.S20B1AMTABS000.S20B1ANNABS000.S20B1AZTABS000.S20B1I1EABS000.

S20B1I2TABS000.S20B1IBBABS000.S20B1ICVABS000.S20B1IEEABS000.S20B1IGTABS000.

S20B1IMTABS000.S20B1INNABS000.S20B1IZTABS000.S20B1S1EABS000.S20B1S2TABS000.

S20B1SBBABS000.S20B1SCVABS000.S20B1SEEABS000.S20B1SGTABS000.S20B1SMTABS000.

S20B1SNNABS000.S20B1SZTABS000.S20B1A1EANS000.S20B1AGTANS000.S20B1I1EANS000.

S20B1SGTANS000.S20B1S1EABL000.S20B1AGTABS600.S20B1S2TANS000

S30金属泵：S30B1A1EABS000.S30B1A2TABS000.S30B1A2TABS000.S30B1ABBABS000.S30B1ACVABS000.

S30B1AEEABS000.S30B1AGTABS000.S30B1AMTABS000.S30B1ANNABS000.S30B1I1EABS000.

S30B1I2TABS000.S30B1IBBABS000.S30B1ICVABS000.S30B1IEEABS000.S30B1IGTABS000.

S30B1INNABS000.S30B1S1EABS000.S30B1S2TABS000.S30B1SBBABS000.S30B1SCVABS000.

S30B1SEEABS000.S30B1SGTABS000.S30B1SMTABS000.S30B1SNNABS000.S30B1SGTABS600.S30B1SGTSDS600.

PB1/4非金属泵：

PB 1/4,TS3CA.PB 1/4,TT3CA.PB 1/4,TU3CA.PB 1/4,TR3PP.PB 1/4,TS3PP.

PB 1/4,TT3PP.PB 1/4,TU3PP.PB 1/4,TS3K.PB 1/4,TT3K.PB 1/4,TU3K.

S05非金属泵：S05B2C1TCBS000.S05B2C2TCBS000.S05B2CBTCBS000.S05B2CUTCBS000.S05B2CZTCBS000.

S05B2K1TPBS000.S05B2K2TPBS000.S05B2KBTPBS000.S05B2KUTPBS000.S05B2KZTPBS000.

S05B2N1TPBS000.S05B2N2TPBS000.S05B2NBTPBS000.S05B2NUTPBS000.S05B2NZTPBS000.

S05B2P1TPNI000.S05B2P1TPBS000.S05B2P2TPNI000.S05B2P2TPBS000.S05B2PBTPNI000.

S05B2PBTPBS000.S05B2PUTPNI000.S05B2PUTPBS000.S05B2PZTPNI000.S05B2PZTPBS000.

S05B2V1TCBS000.S05B2V2TCBS000.S05B2VZTCBS000.

S07非金属泵：S07B1K1KPBS000.S07B1K2KPBS000.S07B1KZKPBS000.S07B1N1NPBS000.S07B1N2NPBS000.

S07B1P1PPBS000.S07B1P2PPBS000.S07B1PBPPBS000.S07B1PUPPBS000.S07B1PZPPBS000.

S07T1P7PPBS000.S07T1P8PPBS000.S07T1PBPPBS000.

S10非金属泵：S10B1K1KPAS000.S10B1K2KPAS000.S10B1KZKPAS000.S10B1N1NPAS000.S10B1N2NPAS000.

S10B1NZNPAS000.S10B1P1PPAS000.S10B1P2PPAS000.S10B1PZPPAS000.

S1F非金属泵：S1FB3C1PCUS000.S1FB3C2PCUS000.S1FB3CBPCUS000.S1FB3CGPCUS000.S1FB3CNPCUS000.

S1FB3CVPCUS000.S1FB3CZPCUS000.S1FB3K1KPUS000.S1FB3K2KPUS000.S1FB3KGKUS000.

S1FB3KVKUS000.S1FB3KZKUS000.S1FB3P1PPNI000.S1FB3P1PPUS000.S1FB3P2PPNI000.

S1FB3P2PPUS000.S1FB3PBPPNI000.S1FB3PBPPUS000.S1FB3PGPPNI000.S1FB3PGPPUS000.

S1FB3PMPPUS000.S1FB3PNPPNI000.S1FB3PNPPUS000.S1FB3PVPPNI000.S1FB3PVPPUS000.

S1FB3PZPPNI000.S1FB3PZPPUS000.S1FB3V1KCUS000.S1FB3V2KCUS000.S1FB3VGKCUS000.

S1FB3VVKCUS000.S1FB3VZKCUS000.

S15非金属泵：S15B3C1PCAS000.S15B3C2PCAS000.S15B3CMPCAS000.S15B3CZPCAS000.S15B3K1KPAS000.

S15B3K2KPAS000.S15B3K2KPAS000.S15B3KCKPAS000.S15B3KGKPAS000.S15B3KMKPAS000.

S15B3KNKPAS000.S15B3KZKPAS000.S15B3P1PPAS000.S15B3P2PPAS000.S15B3PBPPAS000.

S15B3PCPPAS000.S15B3PGPPAS000.S15B3PMPPAS000.S15B3PNPPAS000.S15B3PZPPAS000.

S20非金属泵：S20B3C1PCUS000.S20B3C2PCUS000.S20B3CZPCUS600.S20B3K1KPUS000.S20B3K2KPUS000.

S20B3KBKUS000.S20B3KCKUS000.S20B3KGKUS000.S20B3KNKUS000.S20B3KZKUS000.

S20B3P1PPUS000.S20B3P2PPUS000.S20B3PBPPUS000.S20B3PCPPUS000.S20B3PGPPUS000.

S20B3PMPPUS000.S20B3PNPPUS000.S20B3PZPPUS000.

S30非金属泵：

S30B3K1KPAS000.S30B3K2KPAS000.S30B3P1PPAS000.S30B3P2PPAS000.

重载片阀泵：HDF1,DB2A.HDF1,DI2A.HDF1,DN2A.HDF1,DP2A.

HDF1,DR2A.HDF1,DV2A.HDF1,DB2S.HDF1,DI2S.

HDF1,DN2S.HDF1,DP2S.HDF1,DR2S.HDF1,DV2S.

HDF2,DA6A.HDF2,DB6A.HDF2,DI6A.HDF2,DN6A.

HDF2,DP6A.HDF2,DR6A.HDF2,DV6A.HDF2,DA6I.

HDF2,DB6I.HDF2,DI6I.HDF2,DN6I.HDF2,DP6I.

HDF2,DR6I.HDF2,DV6I.HDF2,DA6S.HDF2,DB6S.

HDF2,DI6S.HDF2,DN6S.HDF2,DP6S.HDF2,DR6S.

HDF2,DV6S. HDF3,DA7.HDF3,DB7.HDF3,DK7.HDF3,DN7.

HDF3,DS7.HDF3M,DA2II.HDF3M,DB2II.HDF3M,DK2II.

HDF3M,DN2II.HDF3M,DS2II.

重载球阀泵：HDB1-1/2,SB8A.HDB1-1/2,SC8A.HDB1-1/2,SGN8A.HDB1-1/2,SGZ8A.

HDB1-1/2,SN8A.HDB1-1/2,SS8A.HDB1-1/2,SV8A.HDB1-1/2,SB8CI.

HDB1-1/2,SC8CI.HDB1-1/2,SGN8CI.HDB1-1/2,SN8CI.HDB1-1/2,SS8CI.

HDB1-1/2,SV8CI.HDB1-1/2,SB8SS.HDB1-1/2,SC8SS.HDB1-1/2,SGN8SS.

HDB1-1/2,SN8SS.HDB1-1/2,SS8SS.HDB1-1/2,SV8SS.HDB2,DB4A.

HDB2,DGN4A.HDB2,DGR4A.HDB2,DGZ4A.HDB2,DN4A.

HDB2,DS4A.HDB2,TB4A.HDB2,TC4A.HDB2,TGN4A.HDB2,TN4A.

HDB2,DB4CI.HDB2,DC4CI.HDB2,DGN4CI.HDB2,DGZ4CI.

HDB2,DN4CI.HDB2,DS4CI.HDB2,TB4CI.HDB2,TC4CI.

HDB2,TGN4CI.HDB2,TGR4CI.HDB2,TN4CI.HDB2,TS4CI.

HDB2,DB4SS.HDB2,DC4SS.HDB2,DGN4SS.HDB2,DGZ4SS.

HDB2,DN4SS.HDB2,DS4SS.HDB2,TB4SS.HDB2,TC4SS.

HDB2,TGN4SS.HDB2,TGR4SS.HDB2,TGZ4SS.HDB2,TN4SS.HDB2,TS4SS.

HDB3,DB4CI.HDB3,DC4CI.HDB3,DGN4CI.HDB3,DI4CI.

HDB3,DN4CI.HDB3,DS4CI.HDB3,DU4CI.HDB3,TB4CI.

HDB3,TC4CI.HDB3,TGN4CI.HDB3,TI4CI.HDB3,TN4CI.

HDB3,TS4CI.HDB3,TU4CI.HDB3,DB4SS.HDB3,DC4SS.

HDB3,DGN4SS.HDB3,DI4SS.HDB3,DN4SS.HDB3,DS4SS.

HDB3,DU4SS.HDB3,TB4SS.HDB3,TC4SS.HDB3,TGN4SS.

HDB3,TI4SS.HDB3,TN4SS.HDB3,TS4SS.HDB3,TU4SS.

破裂报警泵：ST1-1/2,SGI5A.ST1-1/2,SGN5A.ST1-1/2,SGV5A.ST1-1/2,SGI5HC.

ST1-1/2,SGN5HC.ST1-1/2,SGV5HC.ST1-1/2,SGI5SS.ST1-1/2,SGN5SS.

ST1-1/2,SGV5SS. S15B3K3KPAV000.S15B3K4KPAV000.S15B3K6KPAV000.

S15B3P3PPAV000.S15B3P4PPAV000.S15B3P6PPAV000.S20B3K3KPUV000.
S20B3K4KPUV000.S20B3K6KPUV000.S20B3P3PPAV000.S20B3P4PPUV000.

S20B3P6PPUV000. S30B3P3PPAV000.S30B3P4PPAV000.

故障排除指南：

泵循环一次:

1.死区（系统压力达到或超过气源压力）：提高泵的进气气压，泵是按零流量情况下11的压力比进行设计的。（不适用于高压2：1单元）

2.气阀或中间垫片安装错误：安装垫片，使其孔正确对齐。

3.致动器柱塞弯曲或缺失：拆下导向阀并检查致动器柱塞泵不运行循环

泵不运行/循环：

1.泵过度润滑：将润滑器设定到可能的低设置或将其拆除。单元是按无润滑运行设计的。

2.空气不足（管道尺寸、PS、CFM）：检查气体管道尺寸和长度、压缩机容量（要求HP比CFM）。

3.检查配气系统：拆下并检查主配气阀、导向阀和导向阀致动器。

4.排出管道堵塞或歧管阻塞：检查是否无意关闭了排出管道阀门。清理排出歧管管道。

5.死区（系统压力达到或超过气源压力）：提高泵的进气气压。泵是按零流量情况下1：1的压力比进行

设计的（不适用于高压2：1单元）

6. 排气消音器阻塞：拆下消音器过滤网，清洁或除冰，然后重新安装。

7. 排气消音器中有泵送液体：拆解泵室。检查隔膜是否破裂或隔膜板总成是否松动。

8. 泵室阻塞：拆解并检查湿润的室。去除或冲洗掉任何障碍物。

泵循环但不启动或无流量：

1. 吸入端出现气蚀：检查吸入情况（将泵移近产品）

2. 止回阀堵塞，阀球没有正确到位或粘住：拆解泵的接液端并手工去除止回阀套中的阻塞物，清理阀球架和阀座周围区域。如果损坏，则更换阀球或阀座。

3. 阀球缺失（被推入室内或歧管中）：阀球或阀座磨损。阀球架中拨爪磨损（更换零件）。使用更重的阀球材料。

4. 阀球/座损坏或被产品腐蚀

5. 检查球阀和或座是否磨损或需要调节：检查球阀和座是否磨损，设置是否正确。必要时更换。

6. 吸入管道堵塞去除或冲洗堵塞物。检查并清理所有吸入滤网或过滤器。

7. 吸入扬程过高：对于超过20英尺液体的吸入扬程，大多情况下，用液体加注液室即可启动泵。

8. 吸入端空气泄漏或产品中进入空气：目视检所有吸入端垫片和管道接头。

9. 排气消音器中有泵送液拆解泵室：检查隔膜是否破裂或隔膜板总成是否松动。